

SSMT LED KEYPAD

Zone 1	Zone 2	Zone 3	Zone 4	Zone 5	Zone 6	Zone 7	Zone 8
Zone 9	Zone 10	Zone 11	Zone 12	Zone 13	Zone 14	Zone 15	Zone 16
Zone 17	Zone 18	Zone 19	Zone 20	Zone 21	Zone 22	Arm	Trouble

[1] [2] [3] [Panic]
 [4] [5] [6] [Camera]
 [7] [8] [9] [Cancel/Camera]
 [*] [0] [#] [Enter]

ON/OFF GLOP [*] [GLOP ID] [*/#] [Enter]
 arm away [0] [0] [#] [1] [Enter]
 arm home [0] [1] [#] [1] [Enter]
 disarm [0] [0] [#] [2] [Enter]
 on siren [0] [0] [#] [3] [Enter]
 off siren [0] [0] [#] [4] [Enter]
 camera auto rotate [Camera] [0] [Enter]
 change to camera 1 [Camera] [1] [Enter]
 change to camera 2 [Camera] [2] [Enter]
 change to camera 3 [Camera] [3] [Enter]
 change to camera 4 [Camera] [4] [Enter]
 change to camera 5 [Camera] [5] [Enter]
 change to camera 6 [Camera] [6] [Enter]
 change to camera 7 [Camera] [7] [Enter]
 change to camera 8 [Camera] [8] [Enter]

Enter setting mode: [1] [2] [3] [4] [Enter]

Zone Bypass [1] [3] [9] [7] [Enter]

In Zone Bypass mode:

Enable Zone [Zone] [*] [Enter] or [Zone] [Zone] [*] [Enter]

Disable Zone [Zone] [#] [Enter] or [Zone] [Zone] [#] [Enter]

Long Press Shortcut Button & Mode Enter

[1] Away Mode Arm	[2] Device 1 On	[3] Device 1 Off	[A] PANIC
[4] Partial 1 Arm	[5] Device 2 On	[6] Device 2 Off	[B] RESERVED
[7] Partial 2 Arm	[8] Device 3 On	[9] Device 3 Off	[C] EXIT/CANCEL
[*] Partial 3 Arm	[0] Device 4 On	[#] Device 4 Off	[D] ENTER

Setting

set system time	[0] [1] [h] [h] [m] [m] [Enter]
set keypad ID	[0] [2] [keypad ID (1 to 9)] [Enter]
show keypad ID	[0] [2] [0] [Enter]
set Arm Away code	[0] [3] [0] [4 or 6 digit code] [Enter]
set Arm Home code	[0] [3] [1] [4 or 6 digit code] [Enter]
set Disarm code	[0] [3] [2] [4 or 6 digit code] [Enter]
set Setting Password	[0] [4] [4 digit password] [Enter]
set Zone Bypass Password	[0] [5] [4 digit password] [Enter]
set Call In Password	[0] [6] [6 digit password] [Enter]
set Phone 1	[0] [7] [1] [phone number (max. 12 digit)] [Enter]
set Phone 2	[0] [7] [2] [phone number (max. 12 digit)] [Enter]
set Phone 3	[0] [7] [3] [phone number (max. 12 digit)] [Enter]
set Phone 4	[0] [7] [4] [phone number (max. 12 digit)] [Enter]
disable Phone 1	[0] [7] [1] [Enter]
disable Phone 2	[0] [7] [2] [Enter]
disable Phone 3	[0] [7] [3] [Enter]
disable Phone 4	[0] [7] [4] [Enter]
Test Phone 1	[0] [8] [1] [Enter]
Test Phone 2	[0] [8] [2] [Enter]
Test Phone 3	[0] [8] [3] [Enter]
Test Phone 4	[0] [8] [4] [Enter]
End Test Phone	[0] [8] [0] [Enter]
Zone Enable	[0] [9] [zone number (1 to 22)] [*] [Enter]
Zone Disable	[0] [9] [zone number (1 to 22)] [#] [Enter]
Add to Home Mode Mask	[1] [0] [zone number (1 to 22)] [*] [Enter]
Remove from Home Mode Mask	[1] [0] [zone number (1 to 22)] [#] [Enter]
Set Zone Beep Duration	[1] [1] [duration (0 to 255 seconds)] [Enter]
Show Inactive wireless zone	[1] [2] [Enter]
Set GLOP Devices Fast key	[1] [3] [Device 1 To 4] [GLOP ID 1 to 4095] [Enter]